


Professional Labelling for Health Care Professionals

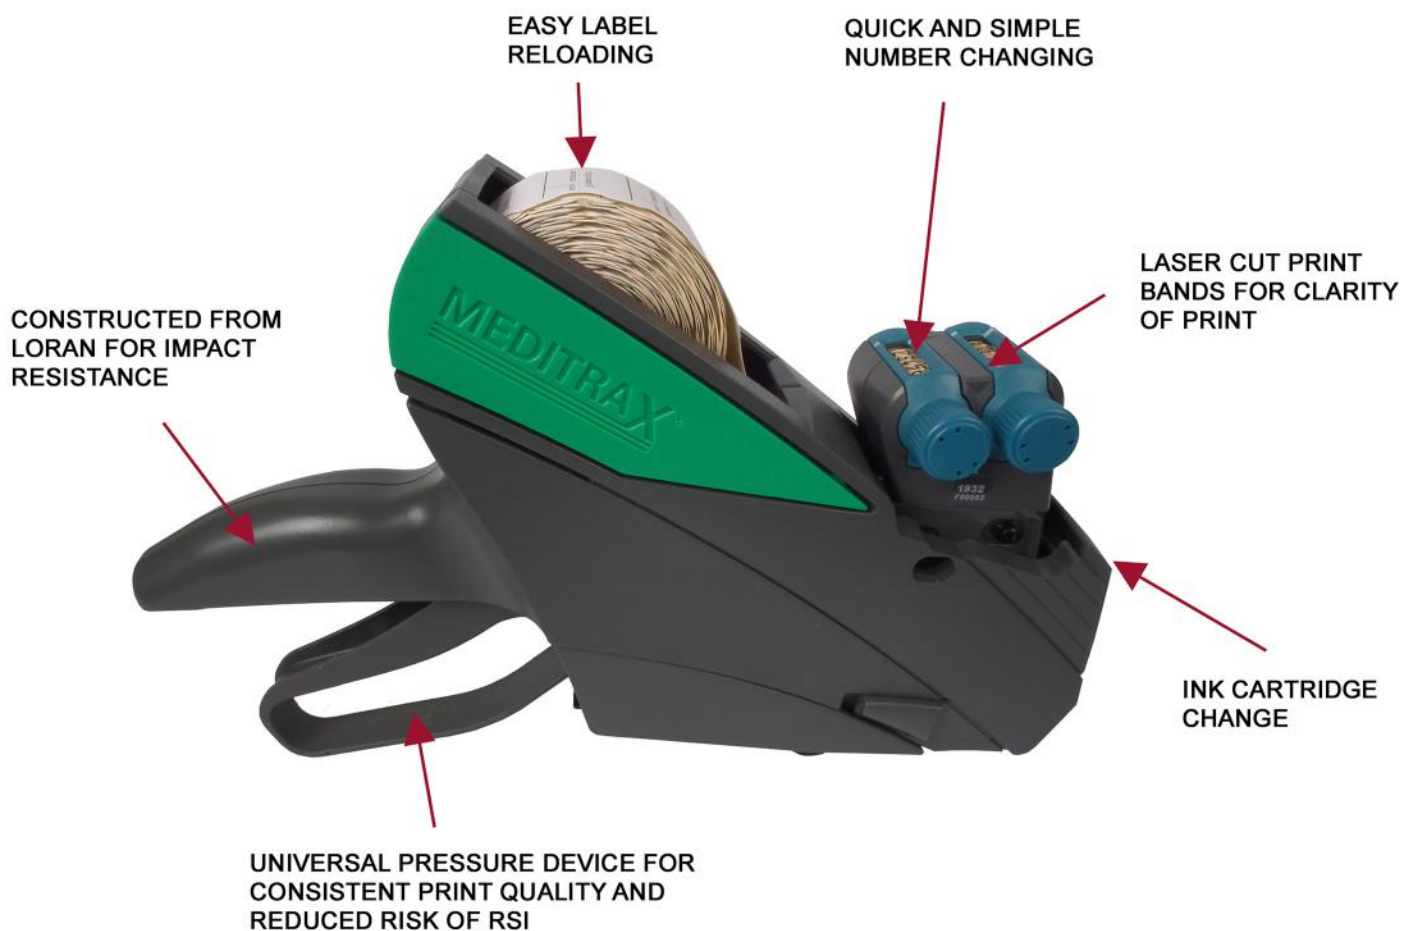

- * DURABILITY
- * EASE OF USE
- * FIT FOR THE PURPOSE

Knowing your Label Applicator



- | | |
|---|--|
| A | Handle Lever |
| B | Handle |
| C | Label Roll Holder |
| D | Dialing/Viewing Area of Printhead |
| E | Dialing Knob Printhead |
| F | Front Cover |
| G | Base Plate Retaining Latches (on both sides) |
| H | Label Applicator Roller |
| I | Label Guide |
| J | Base Plate |
| K | Label Backing Paper |
| L | Transport Unit |
| M | Tear-off Edge for Backing Paper |

To Load the Label Applicator

1. Open the base plate (J) using the base plate retaining latches (G). Slide the latches on both sides of the label applicator to open the base plate.




2. Pull out approximately 15cm of labels and feed the labels down through the label applicator.



3. Slide the new label roll into the label roll holder (C) until the label core snaps into place. The labels should be placed in the holder with the label side facing up.



4. Turn the label applicator over and pull the labels through so they hang over the front of the applicator. Click the base plate (J) closed.

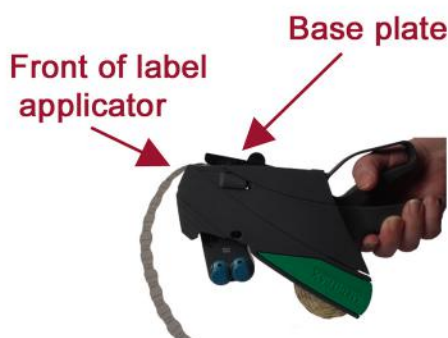

5. Feed the labels through and out the back of the transport unit (L) until the labels emerge between the tear-off edge (M) and the handle lever (A).



6. Turn the label applicator over and squeeze the handles (A+B) repeatedly to tighten, self align and cause a printed label to be dispensed.

Changing the Ink Roller

1. Hold the label applicator horizontally and pull open the front cover (F) and leave open.



2. Squeeze the handles (A+B) together, and hold. The yellow ink roller will appear in the front opening and can be easily removed.



3. To insert the new Ink Roller, squeeze the handles (A+B) together, and hold.

4. While keeping your thumb on the word "TOP" insert the new ink roller into the guide channels and push up into label applicator and release handles. Always check that the studs of the ink roller move within the guide channels.



5. Close the front cover (F), by clicking it shut. The label applicator is now ready for operating.

Important: Please note the Ink pad cannot be re-inked.

External surfaces of the Label Applicator can be decontaminated with an alcohol wipe. It is suggested that this is completed on a routine basis.